

MOEN® 摩恩

SPECIFICATIONS

产品主要特点 Main Features of The Product:

臀洗、妇洗、即热恒温、暖风烘干、座温调节、座盖缓降、座圈缓降、侧边旋钮、来电自启、座圈感应、停电冲水、预润净瓷、防止逆流等。

Rear Wash, Front Wash, Instant Heating, Wind Drying, Seat Temperature Adjustment, Soft-close Cover, Soft-close Seat, Side Turning Knob, Auto-start, Sitting Sensor, Emergency Flushing, Pre-flushing, Anti Counterflow, etc.

产品规格 Product Specifications: 650mm*400mm*490mm

冲水方式 Flush Mode: 喷射虹吸式 Siphon Flush

坑距 Rough-in: 305mm (SW1123C, SW1123CT)

400mm (SW1123D, SW1123DT)

供水压力范围 Inlet Water Pressure Range: 0.14MPa-0.75MPa

输入 Input: 220V~ 50Hz

额定功率 Rated Power: 1080W

电击防护类别 Electric Shock Protection Category: TYPE I

防水等级 Waterproof Level: IPX4

安全装置 Security Device:

温度传感器系统、防干烧系统、过温保护系统、水电隔离系统、可恢复温度开关/熔断器、温度传感控制系统/熔断器

Temperature sensor control system, Dry burning-resistant protection device, over temperature protection system, water and electricity isolation system, temperature reset switch/fuse
Temperature sensing control system, fuse

执行标准 Execute Standard:


GB/T 6952-2015

GB/T 4706.53-2008

GB 4706.1-2005

GB 38448-2019

完工墙面
Completion of metope

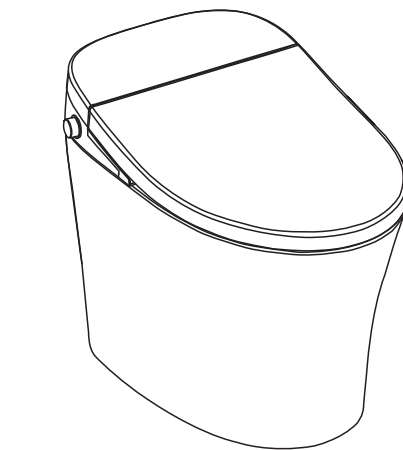


拉普兰系列 LAPLAND Series
智能坐便器
Intelligent Toilet

MODELS: SW1123C (305mm)
SW1123D (400mm)
SW1123CT (305mm)
SW1123DT (400mm)


注意: 本公司保留随时变更图中标示尺寸的权利, 无需另行通知。
Note: The company reserves the right to change the dimensions on the drawing without prior notice.

单位: mm
Unit: mm

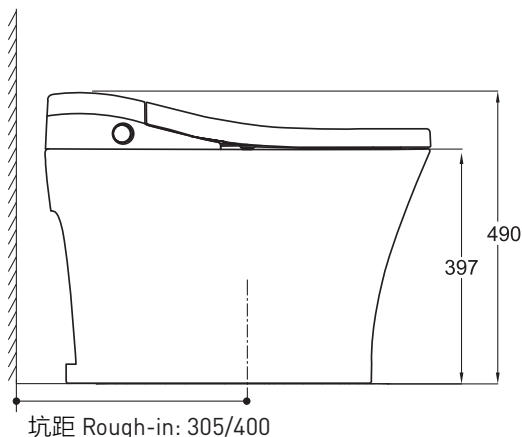


坑距 Rough-in: 305/400

侧面图 Side View

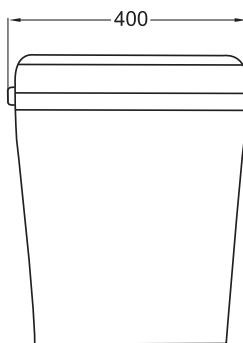

正视图 Front View

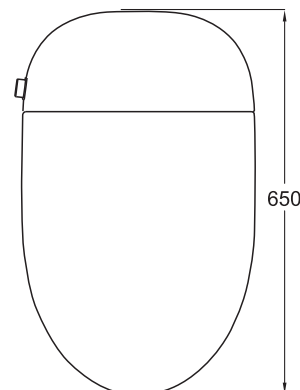

俯视图 Top View

CRITICAL DIMENSIONS DO NOT SCALE

功能表 Function Table

功能分类 Functional Classification	型号 Model		SW1123CT/DT 白色 White	SW1123C/D 白色 White
	功能 Function			
清洗类 Cleaning	臀洗 Rear Wash		●	●
	妇洗 Front Wash		●	●
	强力洗 Strong Rear Wash		●	●
	往复清洗 Moving Wash		●	●
	一键清洗 One-touch Control		●	●
	水压调节 Water-pressure Adjustment		※	※
	水温调节 Water Temperature Adjustment		※	※
	喷嘴位置调节 Nozzle Position Adjustment		※	※
	喷嘴保养 Nozzle Maintenance		●	●
	喷嘴自洁 Nozzle Self Cleaning		●	●
	气泡清洗 Air Bubble Wash		●	●
舒适类 Comfort	座圈加热 Seat Heating		●	●
	暖风烘干 Wind Drying		●	●
	座温调节 Seat Temperature Adjustment		●	●
	风温调节 Wind Drying Adjustment		※	※
	即热恒温 Instant Heating		●	●
	座盖缓降 Soft-close Cover		●	●
	座圈缓降 Soft-close Seat		●	●
节能环保类 Energy Saving And Convenience	遥控控制 Remote Control		※	※
	遥控冲水 Remote Control Flushing		※	※
	侧边旋钮 Side Turning Knob		●	●
	电源按键 Power Button		●	●
	侧边停止按键 Side Stop Button		●	●
	来电自启 Auto-start		●	●
	座圈感应 Sitting Sensor		●	●
	离座冲水 Automatic Flushing		●	●
	侧边键冲水 Side Button Flushing		●	●
	烘干冲水 Wind Drying With Flushing		●	●
	停电冲水 Emergency Flushing		●	●
	自动断电 Automatic Power Off		●	●
	预润净瓷 Pre-flushing		●	●
	便捷拆卸 Easy Disassembly		●	●
安全环保类 Safety And Environmental Protection	空气隔离 Air Isolation		●	●
	抗菌座圈 Antibacterial Seat		●	●
	防止逆流 Anti Counterflow		●	●
	抗菌喷枪 Antibacterial Nozzle		●	●
	安全保护 Safety Protection		●	●
	易洁釉面 Easy Clean Glaze		※	※

备注：● 代表产品有此功能。
※ 代表产品功能选配。

Note: ● indicates that the product has this function.
※ indicates that this product feature is optional.

CRITICAL DIMENSIONS DO NOT SCALE

侧面旋钮的使用说明 Side Turning Knob Use Instructions


电源Power/关机Shutdown

待机时，长按旋钮3秒关机，指示灯熄灭。

关机时，前旋/后旋/按压等动作均会开机，产品自动进入待机状态。

When in standby, press and hold the knob for 3 seconds to shut down, and the indicator light goes out.

When it is turned off, the work such as forward rotation/back rotation/pressing will be turned on, and the product will automatically enter the standby state.

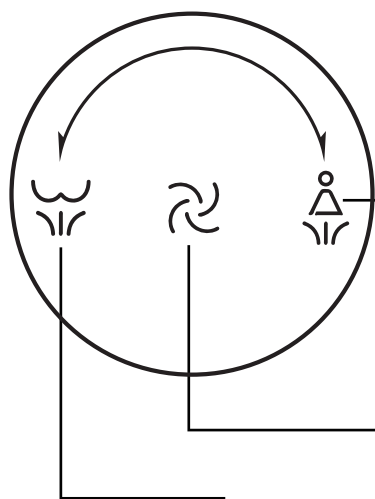

智能妇洗Smart front wash

开机,着座并目无操作时

旋钮前旋，先往复妇洗1分钟，再执行冲水，然后暖风烘干2分钟。

快速烘干：往复妇洗过程中旋钮再次往前旋，停止妇洗，先执行冲水，再开启暖风烘干。

停止：往复妇洗/烘干过程中,按压旋钮,进入待机模式。

When powered on and seated without operation

Turn the knob forward, oscillating front wash for 1 minute, then flush, and then dry in warm air for 2 minutes.

Fast drying: Turn the knob forward again during the oscillating front washing process, stop front washing, will first perform flushing, then turn on the warm air drying.

Stop: During oscillating front washing/drying process, press the knob to enter standby mode.

冲水Flush

待机时按压旋钮启动大冲水。

待机且离座时快速按压旋钮2次，启动小冲水。

When in standby, press the knob to start a big flush.

When no one use it and in eco mode, quickly press the knob twice to start a small flush.

停电冲水Emergency flushing

停电状态下，长按旋钮启动冲水一次。

In the state of power failure, long press the knob to start flush once.

旋鈕燈光Knob lights

状态 mode	灯光颜色 Light color
待机状态 Standby mode	浅蓝色 Light blue
冲水模式 Flush mode	深蓝色 Navy blue
臀洗/妇洗模式 Rear wash/Front wash mode	中蓝色 Medium blue
暖风烘干模式 Warm air drying mode	亮蓝色 Bright blue

CRITICAL DIMENSIONS DO NOT SCALE