

MOEN® 摩恩

Specifications

产品特点 Main Features of the Product

一键清洗、智能夜灯、自动除臭、可拆卸喷嘴、遥控控制、离座冲水、停电冲水、电解水、紫外线杀菌、手势微波、空气隔离、防止逆流、安全保护等。

One-touch Control, Smart Night Light, Automatic Deodorization, Replaceable Nozzle, Remote Control, Automatic Flushing, Emergency Flushing, Water Electrolysis, UV Sterilization, Gesture Microwave, Air Isolation, Anti Counterflow, Safety Protection etc.

产品规格 Product Specification: 684mm*415mm*488mm

洗净方式 Flushing Method: 超旋式冲洗 Super-spin flushing

坑距 Rough-in:

305mm(SW1381C/SW1382C/SW1383C/SW1384C/SW1385C)

400mm(SW1381D/SW1382D/SW1383D/SW1384D/SW1385D)

供水水压范围: Inlet Water Pressure Range: 0.08MPa-0.75MPa

输入 Intup: 220V~ 50Hz

额定功率 Rated Power: 1200W

电击防护类别 Electric Shock Protection Category: TYPE I

防水等级 Waterproof Level: IPX4


安全装置 Safety Devices:

蝶形温控器、热保护器、流量检测装置、双金属片温控器、温度保险丝
Butterfly-shaped thermostat, thermal protector, flow detection device, Bimetal thermostat, thermal cutoff

执行标准 Execute Standard:

GB/T 34549-2017

GB 38448-2019

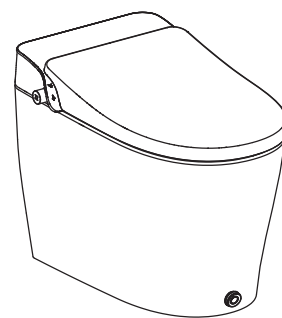

新月系列 CRESCENT Series
智能坐便器 Intelligent Toilet

Models:

SW1381C(坑距 Rough-in: 305mm)

SW1381D(坑距 Rough-in: 400mm)

SW1382C(坑距 Rough-in: 305mm)

SW1382D(坑距 Rough-in: 400mm)

SW1383C(坑距 Rough-in: 305mm)

SW1383D(坑距 Rough-in: 400mm)

SW1384C(坑距 Rough-in: 305mm)

SW1384D(坑距 Rough-in: 400mm)


SW1385C(坑距 Rough-in: 305mm)

SW1385D(坑距 Rough-in: 400mm)


**注意: 本公司保留随时变更图中
标示尺寸的权利, 无需另行通知。
Note: The company reserves the
right to change the dimensions on
the drawing without prior notice.**

完工墙面
Completion of metope


单位: mm
Unit: mm

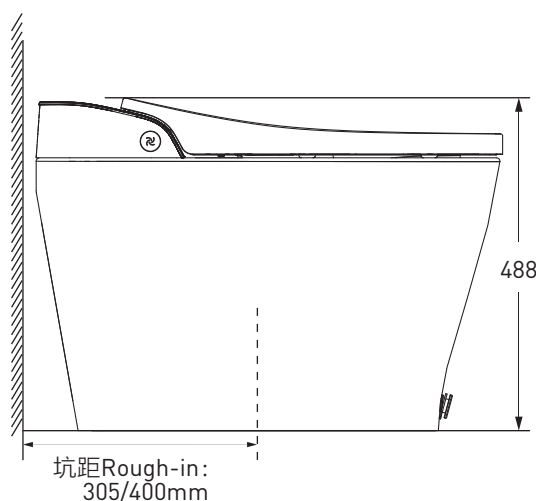

侧面图 Side View

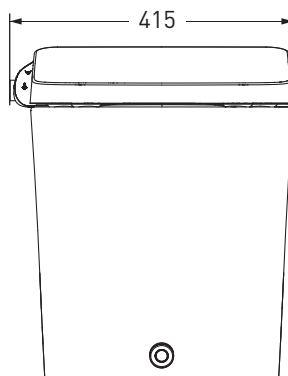

正视图 Front view

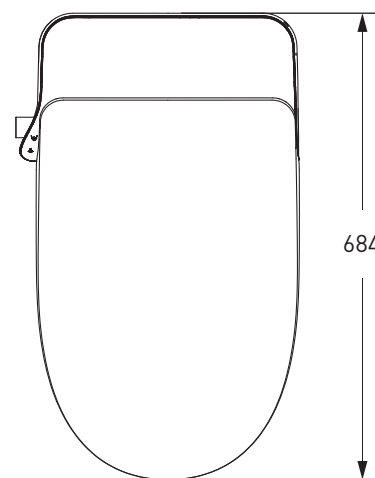

俯视图 Top View

CRITICAL DIMENSIONS DO NOT SCALE

功能表 Function Table

功能分类 Functional Classification	功能 Function 型号 Model	SW1381C/D 深空灰 Black	SW1382C/D 石纹 Stone	SW1383C/D 白橡木 White oak	SW1384C/D 语音交互版 深空灰 w/ voice control Black	SW1385C/D 语音交互版 白橡木 w/ voice control White oak
冲水类 Washing	虹吸冲水 Siphon Flushing	●	●	●	●	●
	易洁釉面 Easy Clean Glaze	●	●	●	●	●
	预润净瓷 Pre-flushing	●	●	●	●	●
	脚触冲水 Foot-touch Flushing	●	●	●	●	●
	遥控冲水 Remote Control Flushing	●	●	●	●	●
	离座冲水 Automatic Flushing	●	●	●	●	●
	烘干冲水 Wind Drying with Flushing	●	●	●	●	●
	侧边键冲水 Side Button Flushing	●	●	●	●	●
	低压冲水 Low-pressure Flushing	●	●	●	●	●
	停电冲水 Emergency Flushing	●	●	●	●	●
清洗类 Cleaning	电解水 Water Electrolysis	●	●	●	●	●
	前置过滤(不锈钢网) Pre-filter with SUS Screen	●	●	●	●	●
	清洗水过滤(PP棉) Water Purification with PP	●	●	●	●	●
	臀洗 Rear Wash	●	●	●	●	●
	妇洗 Front Wash	●	●	●	●	●
	一键清洗 One-touch Control	●	●	●	●	●
	往复清洗 Moving Wash	●	●	●	●	●
	宽幅清洗 Wide Range Wash	●	●	●	●	●
	气泡清洗 Air Bubble Wash	●	●	●	●	●
	脉冲清洗 Massage	●	●	●	●	●
	冷热按摩 Hot and Cold Massage	●	●	●	●	●
	水压调节 Water-pressure Adjustment	●	●	●	●	●
	水温调节 Water Temperature Adjustment	●	●	●	●	●
	喷嘴位置调节 Nozzle Position Adjustment	●	●	●	●	●
	抗菌喷枪 Antimicrobial Nozzle	●	●	●	●	●
	喷嘴自洁 Nozzle Self Cleaning	●	●	●	●	●
	紫外线杀菌水 Water UV Sterilization	●	●	●	●	●
	喷枪紫外线杀菌 Nozzle UV Sterilization	●	●	●	●	●
	即热恒温 Instant Heating	●	●	●	●	●
灯光类Lighting	LED夜灯(陶瓷腔内) Night Light (inside)	●	●	●	●	●
	智能夜灯 Smart Night Light	●	●	●	●	●
舒适便捷类 Comfort and Convenience	座圈加热 Seat Heating	●	●	●	●	●
	抗菌座圈 Antimicrobial Seat	●	●	●	●	●
	暖风烘干 Wind Drying	●	●	●	●	●
	快速烘干 Flash Drying	●	●	●	●	●
	自动除臭 Automatic Deodorization	●	●	●	●	●
	可拆卸喷嘴 Replaceable Nozzle	●	●	●	●	●
	喷嘴保养 Nozzle Maintenance	●	●	●	●	●
	舒适座圈 Comfortable Seat	●	●	●	●	●
	座盖缓降 Soft-close Cover	●	●	●	●	●
	座圈缓降 Soft-close Seat	●	●	●	●	●
	便捷拆卸 Easy Disassembly	●	●	●	●	●
	来电自启 Auto-start	●	●	●	●	●
	智能节电 Smart Energy Saving	●	●	●	●	●
	休眠模式 Automatic Power Off	●	●	●	●	●
	个性设置 Individual Setting	●	●	●	●	●
控制类 Controlling	遥控控制 Remote Control	●	●	●	●	●
	旋钮控制 Turning Knob	●	●	●	●	●
	电源开/关控制 Power Button	●	●	●	●	●
	侧边停止按键 Side Stop Button	●	●	●	●	●
	座圈感应 Sitting Sensor	●	●	●	●	●
	座温调节 Seat Temperature Adjustment	●	●	●	●	●
	风温调节 Wind Drying Adjustment	●	●	●	●	●
	风速调节 Wind Speed Adjustment	●	●	●	●	●
	感应翻盖 Automatic Flipping	●	●	●	●	●
	手势翻盖 Gesture Flipping for Cover	●	●	●	●	●
	手势翻圈 Gesture Flipping for Seat	●	●	●	●	●
	脚触翻圈 Foot-touch Flipping for Seat	●	●	●	●	●
	脚触翻盖 Foot-touch Flipping for Cover	●	●	●	●	●
	语音控制 Voice Control	—	—	—	●	●
安全类 Safety	空气隔离 Air Isolation	●	●	●	●	●
	防止逆流 Anti Counterflow	●	●	●	●	●
	安全保护 Safety Protection	●	●	●	●	●

备注: ● 代表产品有此功能, — 代表产品无此功能。 Note: ● Indicates that the product has this function. — This function is not available for the product.


CRITICAL DIMENSIONS DO NOT SCALE

冲水Flushing

便后冲水
Flushing after urination

唤醒按键 Wake-up Button

遥控器按键背光点亮(每次使用前请先按此键)
Remote controller button backlight lit up
(Please press this button before each use)

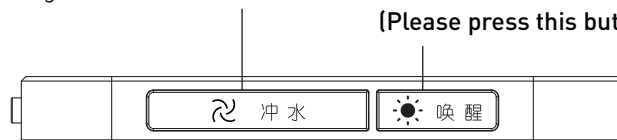

停止Stop

停止臀洗Stop rear wash
停止妇洗Stop front wash
停止烘干Stop wind drying

档位指示灯Gear Indicator Light

四级灯带长度提示档位信息
Four levels of light strip length to indicate the gear information

喷嘴位置Nozzle Position

可进行前后4档喷嘴位置调节
The nozzle position can be adjusted forward or backward between 4 gears

座温Seat Temperature

调节座温
Adjust seat temperature

水压Water Pressure

调节水压
Adjust water pressure



烘干Wind Drying

通过暖风使被清洗部位干燥
Drying the washed part by wind

臀洗Rear Wash

清洗臀部
Wash buttocks

水温Water Temperature

调节水温
Adjust water temperature

妇洗Front Wash

清洗私处
Wash the vagina

电量指示灯

Battery Capacity Indicator Light
提示电量状态
For battery capacity indication



USB充电口USB Charging Port

电量指示灯闪烁时, 请立即充电
Please charge immediately when the battery capacity indicator light flashes

冷热按摩Hot and Cold Massage

水温的冷热交替清洗
Alternating hot and cold water temperature wash
录入个性设置2 Record individual setting 2
调用个性设置2 Call individual setting 2

夜灯Night Light

LED夜灯开启或关闭 Turn on/off the night light



立体按摩3D Massage

全方位的3D按摩效果 All-round 3D massage effect
录入个性设置1 Record individual setting 1
调用个性设置1 Call individual setting 1

水压按摩 Water Pressure Massage

水压的强弱交替清洗
Alternating wash with strong and weak water pressure
录入个性设置3 Record individual setting 3
调用个性设置3 Call individual setting 3

喷嘴清洗Nozzle Clean

清洁喷嘴Clean the nozzle

CRITICAL DIMENSIONS DO NOT SCALE

电源/停止 Powered-on/stop

待机时：长按旋钮中间键3秒开机。

开机且未着座时：长按旋钮中间键3秒进入待机模式。

着座且无功能运行时，长按旋钮中间键3秒开启烘干功能。


开机且着座时：臀洗、妇洗、烘干情况下短按旋钮中间键停止。

Standby mode: Press and hold the middle button of the knob for 3 seconds to power on.

Powered on and not seated: Press and hold the middle button of the knob for 3 seconds to enter the standby mode.

When seating and running without function, press and hold the middle button of the knob for 3 seconds to realize the wind drying function.

Powered on and seated: When the rear wash, front wash, or wind drying is running, short press the middle button of the button to stop.

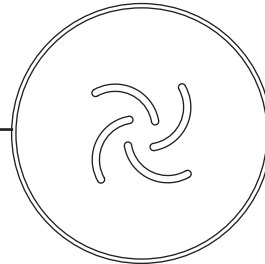

冲水 Flushing

着座且无功能运行时或离座时。

短按旋钮中间键发送陶瓷冲水命令，实现陶瓷冲水一次。

Seated with no functions running, or not seated:

Short press the middle button of the knob to send the ceramiflush command, so as to realize ceramic flush once.

※冲洗一次后须等水箱蓄到足够水后才能进行下一次冲水，蓄水时间约为30秒。

※After flushed once, it need take 30 seconds to store water before next flushing.

智能臀洗 Smart Rear Wash

开机时，着座且无清洗、烘干状态下。

【后旋】旋钮45°以上发送智能臀洗命令。进入智能臀洗状态，清洗默认为往复清洗开启状态，整个功能运行周期为：臀洗1.5分钟+暖风烘干4分钟+暖风烘干时冲水一次。

智能臀洗处于清洗状态时，长按旋钮中间键3秒可切换暖风烘干功能。

智能臀洗处于清洗状态时，再次【前旋】旋钮增加清洗强度，【后旋】旋钮减少清洗强度。

In powering on, seating without washing or drying.

[Turn backward] the knob for 45° or more to send smart rear wash command. Smart rear wash is activated, and the oscillating wash mode is enabled by default. The entire functional operating cycle is: rear wash for 1.5 minutes + wind drying for 4 minutes + flush once during wind drying.

When the smart rear wash is in the wash mode, press and hold the middle button of the knob for 3 seconds to switch to the wind drying function.

When the smart rear wash is in the wash mode, [forward rotate] the knob once again to increase the wash strength, and [backward rotate] the knob to reduce the wash strength.

智能妇洗 Smart Front Wash

开机时，着座且无清洗、烘干状态下。

【前旋】旋钮45°以上发送智能妇洗命令。进入智能妇洗状态，清洗默认为往复清洗开启状态，整个功能运行周期为：妇洗1.5分钟+暖风烘干4分钟+暖风烘干时冲水一次。

智能妇洗处于清洗状态时，长按旋钮中间键3秒可切换暖风烘干功能。

智能妇洗处于清洗状态时，再次【前旋】旋钮增加清洗强度，【后旋】旋钮减少清洗强度。

In powering on, seating without washing or drying.

[Turn forward] the knob for 45° or more to send smart front wash command. Smart front wash is activated, and the oscillating wash mode is enabled by default. The entire functional operating cycle is: front wash for 1.5 minutes + wind drying for 4 minutes + flush once during wind drying.

When the smart front wash is in the wash mode, press and hold the middle button of the knob for 3 seconds to switch to the wind drying function.

When the smart front wash is in the wash mode, [forward rotate] the knob once again to increase the wash strength, and [backward rotate] the knob to reduce the wash strength.

一键清洗(智能臀洗、智能妇洗) One-touch Wash (smart rear wash and smart front wash)

360°无极旋钮集成了臀洗、妇洗、暖风烘干和一键冲水功能，使用方便。人性化的一键操作方便老人、小孩及夜间自如操作，轻松完成，智享便捷。

The 360° continuously variable knob integrates the functions of rear wash, front wash, wind drying, and one-touch flushing, which is convenient to use.

Humanized one-touch operation is convenient for the elder, children, and nighttime smooth operation, which can be easily completed, and users can fully enjoy the convenience brought by smart techniques.

CRITICAL DIMENSIONS DO NOT SCALE