

## 淋浴升降杆 安装说明书

### Shower Sliding Bar INSTALLATION INSTRUCTIONS

如需安装支持，配件丢失等，请联系MOEN。  
(中国) 400-630-8866  
[www.moen.cn](http://www.moen.cn)

PLEASE CONTACT MOEN FIRST  
For Installation Help, Missing or Replacement  
Parts  
(China) 400-630-8866  
[www.moen.cn](http://www.moen.cn)

 
#### 推荐工具

为了安全和让安装和替换变得容易，Moen建议您使用以下工具：

#### HELPFUL TOOLS

For safety and ease of replacement, Moen recommends the use of these helpful tools.

|   |   |   |  |
|---|---|---|--|
| <br>防护镜<br>Safety Glasses | <br>钳子<br>Pliers | <br>电钻<br>Electric Drill   | <br>十字螺丝刀<br>Phillips Screwdriver |
| <br>手电筒<br>Flashlight     | <br>锤子<br>Hammer | <br>密封胶<br>Plumber's Putty |  |




图片仅供参考  
(款式因型号而异)

Image is for reference only  
(Style varies by model)

记录购买的型号：  
(保存安装说明书以备将来参考)

Record Purchased Model Number:  
(Save instruction sheet for future reference)

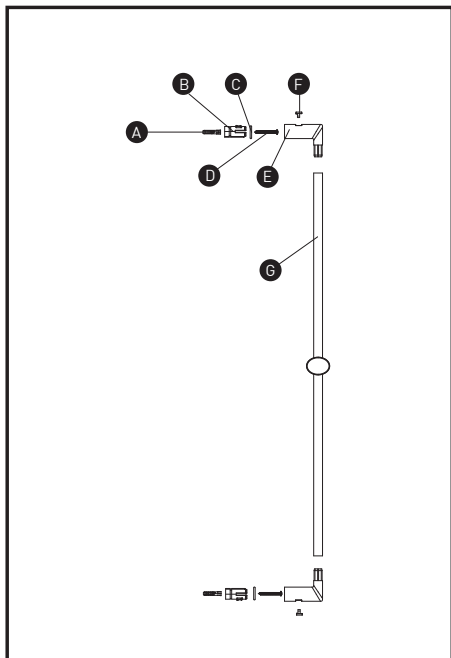

## 零件清单

- A.膨胀管 x2  
B.固定座 x2  
C.O型圈 x2  
D.自攻螺钉 x2  
E.墙座 x2  
F.扣盖 x2  
G.滑杆组件 x1

## Parts List

- A. Expansion tube x2
- B. Fixed seat x2
- C. O-ring x2
- D. Self-tapping screws x2
- E. Wall base x2
- F. Buckle cover x2
- G. Slider assembly x1

**敬告:**在墙上钻任何孔时，请确保在您准备钻孔的地方没有隐藏的管道和电缆!

**申明:**本公司保留更改产品结构不另行通知的权利。

**安装注意事项:**

- 1.本产品已经通过出厂检测及调试，请勿自行拆卸。
- 2.安装前，请务必先清除墙体预埋水管内的杂物及污泥，以免影响出水功能。
- 3.本产品的工作压力: 0.05MPa~0.6MPa,推荐工作压力0.2MPa~0.5MPa.
- 4.当您在钻孔和安装时请注意安全。


**WARNING:**Please ensure there are no hidden service pipes and cables where you intend to drill.

**DECLARE:**We reserve the rights to alter the structure of the product without any notice.

**IMPORTANCE FOR INSTALL ATION:**

- 1.The product has been passed the functionality test before ex-factory,please do not disassemble by yourself at will.
- 2.The working pressure of this product is 0.05MPa~0.6MPa.The recommended water pressure is 0.2MPa~0.5MPa.
- 3.Please be carefull of your security while dillig and installing.

1

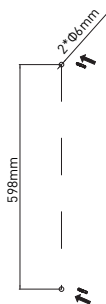

1. 用铅笔在墙上标记钻孔位置，安装距离598mm，选取规格为Φ6mm标准钻头安装在电钻上，在标记位置处钻Φ6mm，深35mm的孔，将膨胀管尖端对准孔位，均匀用力安装入孔内。

2. 注意检查膨胀管端面需与墙面平齐。

1. Mark the drilling position on the wall with a pencil. The installation distance is 598mm. Choose a standard drill bit of Φ6mm and install it on the electric drill. Drill a hole of Φ6mm and a depth of 35mm at the marked position. Align the tip end of the expansion tube with the hole and apply force evenly. Install into the hole.

2. Note that the end face of the expansion pipe must be flush with the wall.


2



使用自攻螺钉将带有O型圈的固定座固定在墙壁上。确保螺钉锁到位，固定件不可轴向方向晃动。

Use self-tapping screws to fix the holder with O-ring on the wall. Make sure that the screws are locked in place, and the fixing parts cannot be shaken in the axial direction.


3

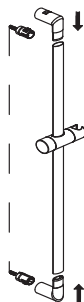

将墙座插入滑杆组件上下两端。检查墙座端面需与滑杆口端面贴紧，确保装配到位。

Insert the wall base into the upper and lower ends of the slide bar assembly. Check that the end face of the wall seat must be close to the end face of the slide bar to ensure that it is assembled in place.

4

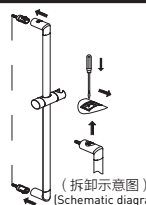

(拆卸示意图)  
(Schematic diagram of disassembly)


特别说明：如需维修拆卸时，先将扣盖取下（拆卸说明见图5），用一字螺丝刀对准固定座上一字型槽（如拆卸示意图），然后均匀向下垂直施力，同时向外均匀施加拉力，滑杆组件可拆下。

Special note: If you need to repair and disassemble, first remove the buckle cover (see figure 5 for disassembly instructions), use a flat-blade screwdriver to align the flat-shaped groove on the fixing seat (such as the disassembly diagram), and then apply it vertically downwards evenly. At the same time, the pulling force is uniformly applied outward, and the slide bar assembly can be removed.

将组装好的滑杆组件装入固定座，墙座端面与墙面贴紧，以确保墙座安装到位。

Install the assembled slide bar assembly into the fixing base, and the end face of the wall base is close to the wall to ensure that the wall base is installed in place.

5

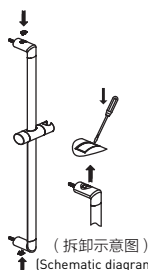

(拆卸示意图)  
(Schematic diagram of disassembly)

特别说明：如需维修拆卸时，用一字螺丝刀对准扣盖侧壁缝隙中插入（如拆卸示意图），轻轻撬动，扣盖可撬出。

Special note: If you need to repair and disassemble, use a flat-blade screwdriver to insert into the gap in the side wall of the buckle cover (as shown in the disassembly diagram), and gently pry the buckle cover out.

确认墙座组件贴紧墙壁后将扣盖装入上下墙座对应孔内，确保扣盖与墙座面齐平。安装完毕。

After confirming that the wall mount components are tightly attached to the wall, install the buckle cover into the corresponding holes of the upper and lower wall mounts, and make sure that the buckle cover is flush with the wall seat surface. Installed.

## 使用说明

- 滑座旋钮放松后，滑座可沿滑杆上下移动。
- 滑座滑到适合位置后需将旋钮旋紧后方可使用。
- 右侧支架可绕轴心旋转。

**注意：滑座承重<1.5KG。**

## Instructions for Use:

- After the knob of the sliding seat is relaxed, the sliding seat can move up and down along the sliding rod.
- After the sliding seat is slid to a suitable position, the knob must be tightened before it can be used.
- The right bracket can rotate around the axis.

**Note: The sliding seat bearing capacity is less than 1.5KG.**

