

MOEN® 摩恩

Specifications

产品主要特点 Main Features of The Product:

摩力盾、紫外线杀菌水、紫外线杀菌喷头、感应翻盖、手势翻圈、智能夜灯等。

Motor shield, ultraviolet sterilization water, ultraviolet sterilization nozzle, induction flap, gesture circle, smart night light, etc.

产品规格 Product Specifications: 685mm*405mm*498mm

冲水方式 Flush Mode: 喷射虹吸式 Siphon flush

坑距 Rough-in: 305mm(SW1611C)

400mm(SW1611D)

供水压力范围 Inlet Water Pressure Range: 0.14MPa-0.75MPa

输入 Input: 220V ~ 50Hz

额定功率 Rated Power: 1200W

电击防护类别 Electric Shock Protection Category: TYPE I

防水等级 Waterproof Level: IPX4

安全装置 Security Device:

温度传感控制系统、熔断器、温度传感器系统、防干烧系统、过温保护系统、水电隔离系统、可恢复温度开关


Temperature sensing control system, fuse, Temp sensor control system, Dry burning-resistant protection device, over temp protection system, water and electricity isolation system, Temperature reset switch

执行标准 Execute Standard:

GB/T 6952-2015

GB/T 23131-2019

GB 38448-2019

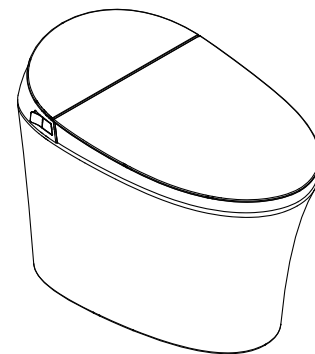

米亚系列 MIA Series
智能坐便器
Intelligent Toilet

Models:

SW1611C(坑距 Rough-in: 305mm)


SW1611D(坑距 Rough-in: 400mm)

注意: 本公司保留随时变更图中标示尺寸的权利, 无需另行通知。


Note: The company reserves the right to change the dimensions on the drawing without prior notice.

完工墙面
Completion of metope


单位: mm
Unit: mm

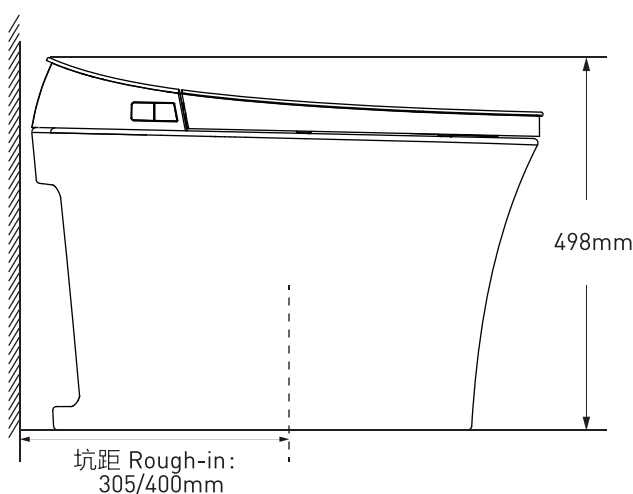

侧面图 Side View

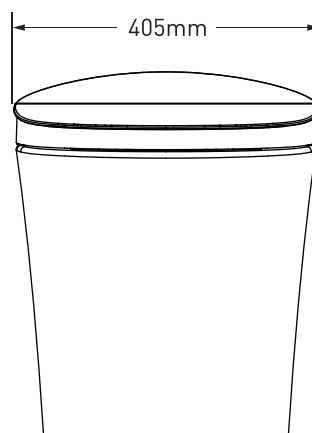

正视图 Front View

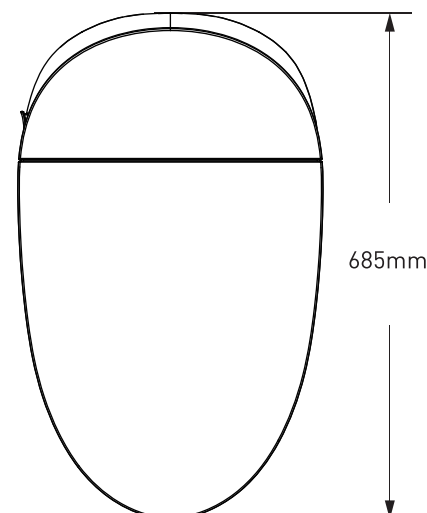

俯视图 Top View

CRITICAL DIMENSIONS DO NOT SCALE


功能表 Function Table

功能分类 Functional Classification	功能 Function 型号 Model	SW1611C/D 香槟金 Golden
冲水类 Washing	虹吸冲水 Siphon Flushing	●
	易洁釉面 Easy Clean Glaze	●
	预润净瓷 Pre-flushing	●
	遥控冲水 Remote Control Flushing	●
	离座冲水 Automatic Flushing	●
	男士小便冲水 Automatic Flushing for Man	●
	侧边键冲水 Side Button Flushing	●
	停电冲水 Emergency Flushing	●
	摩力盾 Bubble Shield	●
清洗类 Cleaning	前置过滤（不锈钢网） Pre-filter（Stainless steel mesh）	●
	臀洗 Rear Wash	●
	妇洗 Front Wash	●
	一键清洗 One-touch Control	●
	往复清洗 Moving Wash	●
	水压调节 Water-pressure Adjustment	●
	水温调节 Water Temperature Adjustment	●
	喷嘴位置调节 Nozzle Position Adjustment	●
	抗菌喷枪 Antibacterial Nozzle	●
	紫外线杀菌水 Water UV Sterilization	●
	喷枪紫外线杀菌 Nozzle UV Sterilization	●
	即热恒温 Instant Heating	●
灯光类Lighting	智能夜灯 Smart Night Light	●
舒适便捷类 Comfort and Convenience	座圈加热 Seat Heating	●
	抗菌座圈 Antibacterial Seat	●
	暖风烘干 Wind Drying	●
	自动除臭 Automatic Deodorization	●
	喷嘴保养 Nozzle Maintenance	●
	座盖缓降 Soft-close Cover	●
	座圈缓降 Soft-close Seat	●
	来电自启 Auto-start	●
	智能节电 Smart Energy Saving	●
	自动断电 Automatic Power Off	●
	个性设置 Individual Setting	●
	遥控控制 Remote Control	●
控制类 Controlling	按键控制 Side Button	●
	座圈感应 Sitting Sensor	●
	遥控翻盖 Remote-control Flipping for Cover	●
	遥控翻圈 Remote-control Flipping for Seat	●
	座温调节 Seat Temperature Adjustment	●
	风温调节 Wind Drying Adjustment	●
	感应翻盖 Automatic Flipping	●
	手势翻圈 Gesture Flipping for Seat	●
	空气隔离 Air Isolation	●
安全类 Safety	防止逆流 Anti Counterflow	●
	安全保护 Safety Protection	●

备注：● 代表产品有此功能。 Note：● indicates that the product has this function.

CRITICAL DIMENSIONS DO NOT SCALE

侧边按键的使用说明 Side Button Use Instructions

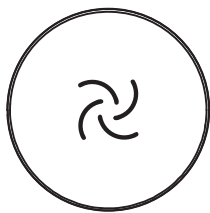

停止 Stop


在智能臀洗/智能妇洗/烘干等操作时，按压冲水按键停止当前操作。
During operations such as smart rear wash/ smart front wash/ dry, press the flush button to stop the current operation.

关机Shutdown

长按冲水按键3秒关机，产品自动进入待机状态。
关机时，长按冲水按键3秒开机。
Press and hold the flush button for 3 seconds to shut down, the product will automatically enter the standby state.
When it is turned off, press and hold the flush button for 3 seconds to power on.

冲水Flush

待机时按压冲水按键启动大冲水。
待机时快速按压冲水按键2次，启动小冲水。
When in standby, press the flush button to start a big flush.
When in standby, quickly press the flush button twice to start a small flush.

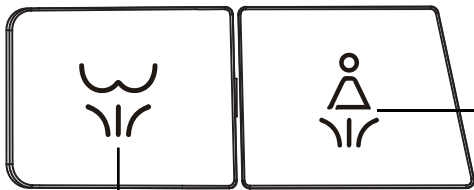

智能臀洗Smart Rear Wash

开机着座并且无操作时
按压臀洗按键，开启智能臀洗功能，先往复臀洗90秒，再执行冲水，然后暖风烘干4分钟。
在智能臀洗过程中再次按压，暂停智能臀洗功能，进入烘干功能。
When powered on and seated without operation
Press the rear wash button to turn on smart rear wash function, moving rear wash for 90 seconds, then flush, and then dry in warm air for 4 minutes.
In the smart rear wash process, press again, and the smart rear wash function will be switched to warm air drying function.

智能妇洗Smart Front Wash

开机着座并且无操作时
按压妇洗按键，开启智能妇洗功能，先往复妇洗90秒，再执行冲水，然后暖风烘干4分钟。
在智能妇洗过程中再次按压，暂停智能妇洗功能，进入烘干功能。
When powered on and seated without operation
Press the front wash button to turn on smart front wash function, moving front wash for 90 seconds, then flush, and then dry in warm air for 4 minutes.
In the smart front wash process, press again, and the smart front wash function will be switched to warm air drying function.

喷嘴保养Nozzle Maintenance


开机并离座时，长按妇洗按键3秒，开启喷嘴清洗功能，清洗管自动伸出。如果喷孔有污垢，可一手轻轻托住清洗管，一手用牙刷进行清洁。
注意：请勿用力过猛，否则会损坏喷嘴。
In the state of turning on and off the seat, press and hold the flush button for 3 seconds, the nozzle will automatically extend. If the spray hole is dirty, you can gently hold the nozzle with one hand and clean it with a toothbrush with the other hand.
Note: Do not use excessive force, otherwise it will damage the nozzle.

蜂鸣器：
鸣一声：着座状态，可响应全部操作。
鸣两声：离座状态，可响应冲水、座温调节等部分功能。
鸣三声或以上：表示产品有故障。
提示：蜂鸣器仅在侧边旋钮、遥控器操作时或初始化排水时才会响起。

Buzzer
The buzzer beeps once: seated state, can respond to all operations.
The buzzer beeps twice: off the seat, can respond to some functions such as auto flush and water temp, seat temp adjust.
The buzzer beeps three times or more: it indicates that the product is faulty.
Hint: The buzzer only rings when the side knob is pressed, or when the remote is operated, or when drainage is initialized.

CRITICAL DIMENSIONS DO NOT SCALE

遥控器的使用说明 Remote Control Use Instructions

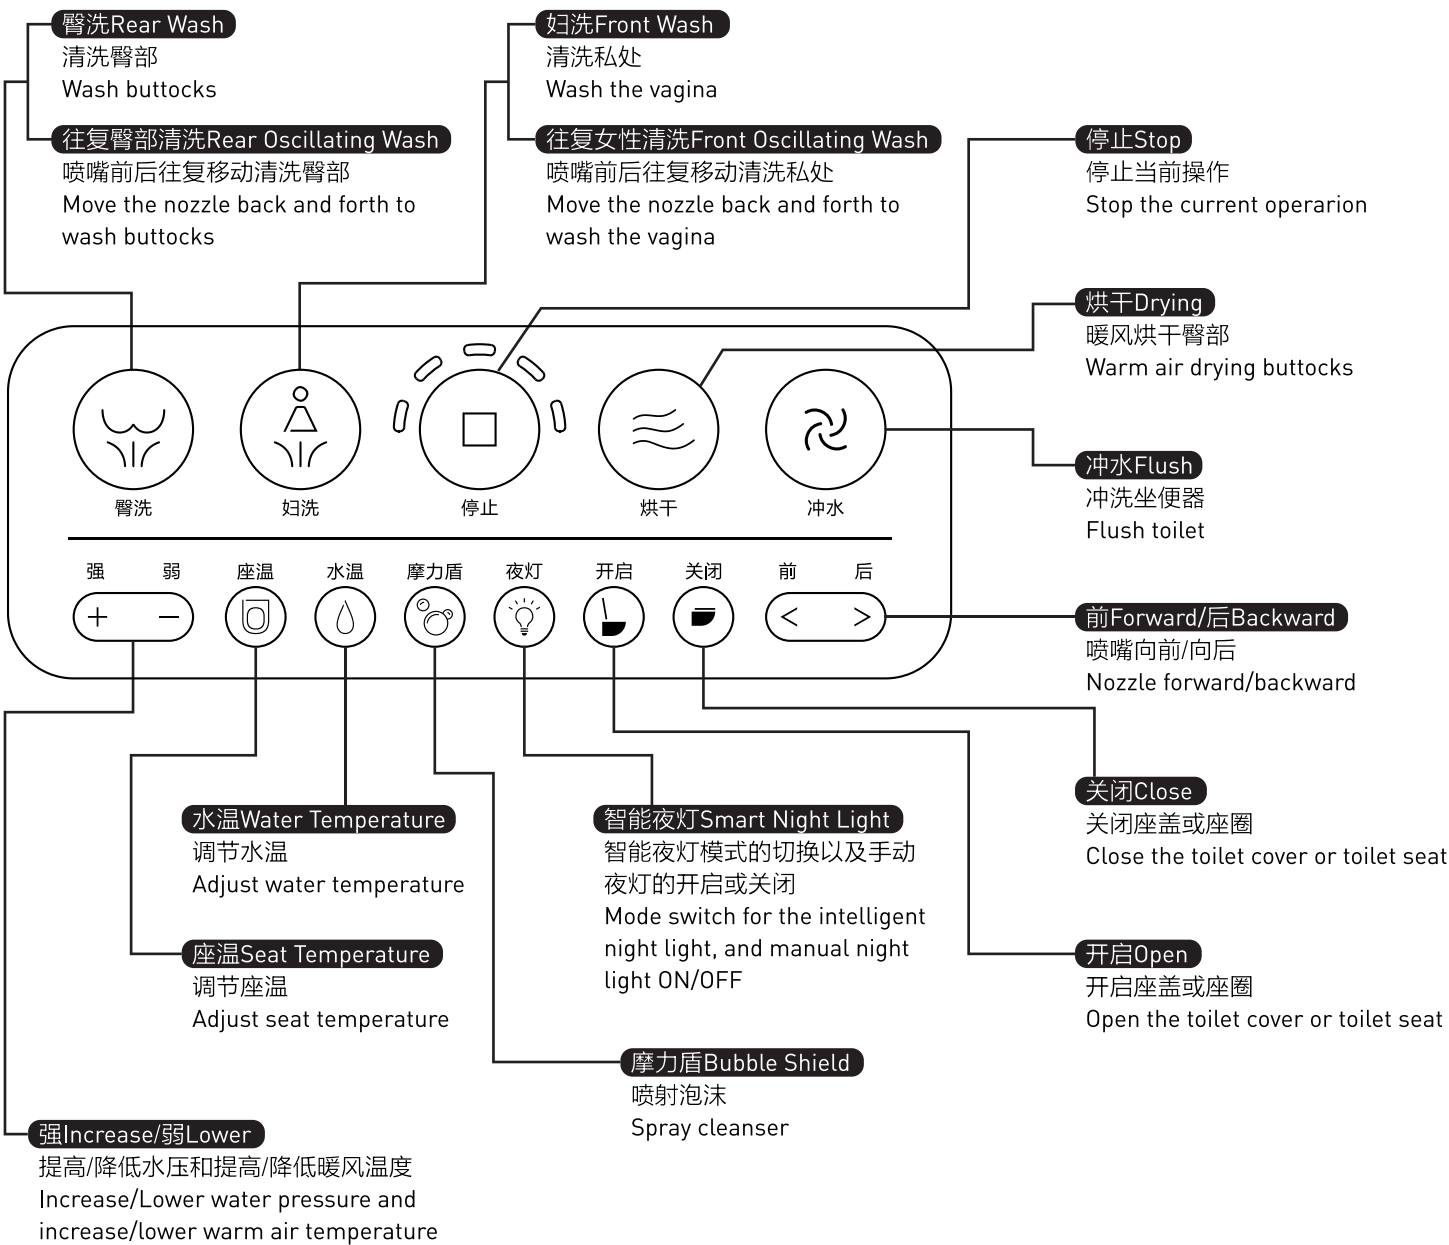

指示灯Indicator	指示灯状态Indicator state	座温Seat temperature	水温Water temperature	水压Water pressure	风温Wind temperature
	1个灯亮 1 light on	33℃	33℃	1档 / 1 gear	1档 / 1 gear
	2个灯亮 2 lights on	指示灯不亮 Indicator off	指示灯不亮 Indicator off	2档 / 2 gear	2档 / 2 gear
	3个灯亮 3 lights on	36℃	36℃	3档 / 3 gear	3档 / 3 gear
	5个灯亮 5 lights on	39℃	39℃	4档 / 4 gear	4档 / 4 gear

CRITICAL DIMENSIONS DO NOT SCALE